


PLUSlite

Square

Strobo Wash

User Instructions

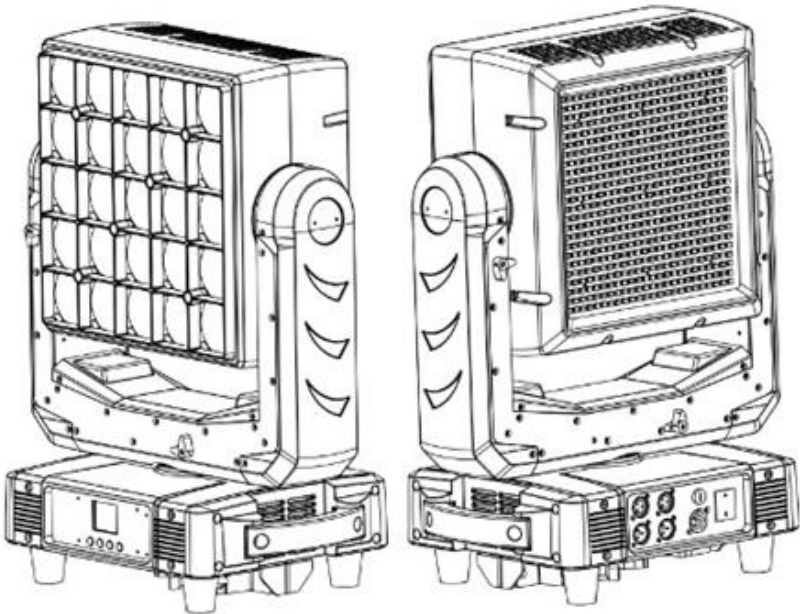

PIU39
AUDIO - VISUAL

<https://www.piu39av.com/pluslite-lighting/>

User manual

Please read the instructions carefully before use

TABLE OF CONTENTS

1. Safety Instructions.....	2-3
2. Technical Specifications.....	4-5
3. How To Control the unit.....	5-7
4. DMX Channel List	8-30
5. Trouble shooting.....	30
6. Fixture Cleaning.....	31

Statement

The product has well capability and intact packing when leave factory. All of the user should comply with warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual.

1. Safety Instructions

Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.

- ☐ Unpack and check carefully there is no transportation damage before using the unit. Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.
- ☐ It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- ☐ The unit is for indoor use only. Use only in a dry location.
- ☐ The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked.
- ☐ Disconnect main power before replacement or servicing.
- ☐ Make sure there are no flammable materials close to the unit while operating as it is fire hazard.

- Use safety cable when fixes this unit. DO NOT handle the unit by taking its head only, but always by taking its base.
- Maximum ambient temperature is T_a : 40°C. DO NOT operate it where the temperature is higher than this Unit surface temperature may reach up to 85°C. DO NOT touch the housing bare-hand during its operation. Turn off the power and allow about 15 minutes for the unit to cool down before replacing or serving.
- In the event of serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- DO NOT touch any wire during operation as high voltage might be causing electric shock.

Warning:

- To prevent or reduce the risk of electrical shock or fire, do not expose the unit to rain or moisture.
- DO NOT open the unit within five minutes after switching off.
- The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.

Caution:

There are no user serviceable parts inside the unit. DO NOT open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, please contact your nearest dealer.

Installation:

The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. And make sure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the unit's weight. Also always use a safety cable that can hold 12 times of the weight of the unit when installing the fixture.

The equipment must be fixed by professionals. And it must be fixed at a place where is out of the touch of people and has no one pass by or under it.

2. Technical Specifications

Light Sources:

1>Wash effect - 25x 40W LED 4in1 RGBW;

2>Strobe effect - 576*0.5W 4in RGBW LED. (Life expectancy> 50,000 hours)

Optical system:

Beam angle is 3.2 ° - 45 °;

Glass light guide rod + PMMA high-quality optical lens

Power Consumption: 1000W; Power factor PF≥0.98

Power Voltage: AC 100-240V, 50/60Hz Working temperature: -10 °C ~ 45 °C

Weight and dimensions:

Dimension: 37.6cm × 27cm × 600cm Net Weight: 24Kgs

Packing details:

Flight case 2-in-1: 743 * 462 * 770mm, gross weight: 78.8kg;

Carton case 1-in-1: 530 * 420 * 595mm, gross weight: 28.5kg

Control

Control Modes: RDM, Artnet Control, DMX512 DMX mode:26/33/43/143

Pan/Tilt

Pan/Tilt: infinite rotation (using photoelectric reset system)

Pan:360°, accuracy 0.86 ° / step, fine-tuning accuracy: 0.0034 °

Tilt:540 °, accuracy 2.11 ° / step, fine-tuning accuracy: 0.008 °;

Construction

Display: 180°reversible 2.4-inch LCD color display(English)

Data In/Out socket: 3-pin & 5-pin XLR sockets; Powercon in, Protection:IP20

Features


Effect configuration: full light domain dimming, 65536 level dimming accuracy; fast strobe 1 ~ 25Hz; preset --- a kind of color macro function; preset --- a kind of effect macro function Led temperature protection & Speed of fan run automatic based on the temperature of the head.

Single led control, zoom effect, ArtNet control, infinite Pan and tilt rotation.

Electronic control technology: menu or console control lamp reset; 0-100% dimming; constant current drive mode; temperature sensor detection, intelligent adjustment of light source power; lamp information query; intelligent fan speed adjustment

Safety protection: over current, over voltage, over heat protection, XY fixed lock

3. How To Control The Unit

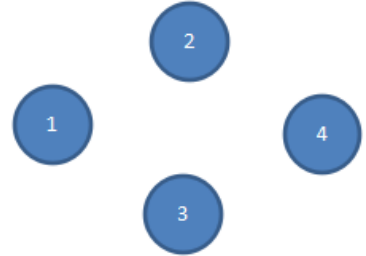

1-MENU 2-UP 3-DOWN 4-ENTER

Display:

- MENU To select the programming functions
- DOWN To go backward in the selected functions
- UP To go forward in the selected functions
- ENTER To confirm the selected functions

Set DMX Address Code:

- 1 Press "**Menu**" to "Set DMX Address", and press "**ENTER**" keys to enter into
- 2 Show "Set DMX Address DMX Address:001",
Press the "**UP and DOWN**" keys to amended
- 3 Press "**ENTER**" keys to save and Exit,
Press the "**MENU**" Keys does not save and Exit
- 4 Press 'left' and 'right' to reverse the display

Menu	Pan Degree	1.540° ; 360°	X-axis running angle selection
	Mic Sense	001 - 100	Sound control sensitivity adjustment
	Pan Invert	1.NO 2.YES	X axis forward and reverse setting
	Tilt Invert	1.NO 2.YES	Y axis forward and reverse setting

	No Signal	1.Black out 2.Hold	
	Fan Set	1.Auto 2.Low 3.High	
	Default	Yes	Factory reset
		No	
	Adjust	Pass Word: up+down+up+down	Changing the value of Pan / Tilt / Focus can correct the angle; changing the value of R / G / B / W can adjust the white balance
		Pan: 0 - 255	
		Tilt: 0 - 255	
		Focus: 0 - 255	
		Red: 0 - 255	
		Green: 0 - 255	
		Blue: 0 - 255	
		White: 0 - 255	
Address	Setting from 001 - 512		
Channel	26 channels	Select channel mode	
	33 channels		
	43 channels		
	143 channels		
Inform	1.CH Value	Each channel show CH value	
	2.Temp_°C	Show the temperature of led board	
	3.Soft V1.0	Show the version number	
	4. IP	002.050.164.014	
	5. Mask	255.000.000.000	
	1.DMX 512		
	2.AUTO		

Mode	3.SOUND	
	4.Manual	Pan : 0--255
		Tilt : 0--255
		Focus : 0--255
		Red : 0--255
		Green : 0--255
		Blue : 0--255
		White: 0--255
		Strobe : 0-255
	5.Master/Alone	Master
Alone		
Language	English	Choose a language
	Chinese	
Reset	1.YES 2.NO	
Display	1.YES 2.NO	

4. DMX Channel List

26CH

Channel	Display	Function	Value
CH-1	Red	Red dimming	0 --- 255
CH-2	Red adjustment	Red adjustment	0 --- 255
CH-3	Green	Green dimming	0 --- 255
CH-4	Green adjustment	Green adjustment	0 --- 255

CH-5	Positive	Blue	Blue dimming	0 --- 255
CH-6		Blue adjustment	Blue adjustment	v
CH-7		White	White dimming	0 --- 255
CH-8		White adjustment	White adjustment	0 --- 255
CH-9	Positive	Color temperature	0--15	No
			16--35	R100%,G UP,B0%
			36--55	R DOWM,G100%,B0%
			56--75	R0%,G100%,B UP
			76--95	R0%,G DOWM,B100%
			96--115	R UP,G0%,B100%
			116--135	R100%,G0%,B DOWM
			136--155	R100%,G UP,B UP
CH-9	Positive	Color temperature	156--175	R DOWM,G DOWM,B100%
			176--195	R 100%,G 100%,B100%,W100%
			196--200	2800K
			201--205	3200K
			206--210	4000K

			211--215	4500K
			216--220	5000K
			221--225	5600K
			226--230	6500K
			231--235	7000K
			236--240	7500K
			241--255	8000K
CH-10		Macro color	0--9	No effect
			10--19	Macro color 1
			20--29	Macro color 2
CH-10		Macro color (10 numbers and one type) and
			240--249	Macro color 24
			250--255	Macro color 25
CH-11		Dimming	0--255	from dark to light
CH-12		Dimming adjust	0--255	Dimming Control
	Positive		0--3	Light up
CH-13		Strobe	4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
			204--255	Random strobe
CH-14		R dimming	0--255	from dark to light

CH-15	Reverse side	G dimming	0--255	from dark to light
CH-16		B dimming	0--255	from dark to light
CH-17		W dimming	0--255	from dark to light
CH-18		Dimmer	0--255	from dark to light
CH-19		Strobe		0--3
			4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
			204--255	Random strobe
CH-20	Pan		0--255	Pan control
CH-21	Tilt		0--255	Tilt control
CH-22	Pan Stepless control		No effect	0----55
	Pan Stepless control		Go from slow to fast	56----155
	Pan Stepless control		Reverse from slow to fast	156----255
CH-23	Tilt Stepless control		No effect	0----55
	Tilt Stepless control		Go from slow to fast	56----155
	Tilt Stepless control		Reverse from slow to fast	156----255
CH-24	Focus		0--255	Focusing
			0--49	Mode 1
			50--99	Mode 2

CH-25	Dimming mode	100--149	Mode 3
		150--255	Mode 4
CH-26	Reset	0--250	No effect
		251--255	Reset within 5S

33CH

Channel	Display	Function	Value	
CH-1	Pan	0--255	Pan control	
CH-2	Tilt	0--255	Tilt control	
CH-3	Pan/Tilt speed	0--255	From fast to slow	
CH-4	Pan Stepless control	No effect	0----55	
		Go from slow to fast	56----155	
		Reverse from slow to fast	156----255	
CH-5	Tilt Stepless control	No effect	0----55	
		Go from slow to fast	56----155	
		Reverse from slow to fast	156----255	
CH-6	Focus	0--255	from small to large	
CH-7		Dimming	0--255	from dark to light
			0--3	Light up

CH-8	Positive	Strobe	4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
			204--255	Random strobe
CH-9		R dimming	0--255	from dark to light
CH-10		G dimming	0--255	from dark to light
CH-11		B dimming	0--255	from dark to light
CH-12		W dimming	0--255	from dark to light
CH-13	Positive	Color temperature	36--55	R DOWM,G100%,B0 %
			56--75	R0%,G100%,B UP
CH-13		Color temperature	76--95	R0%,G DOWM,B100%
			96--115	R UP,G0%,B100%
			116--135	R100%,G0%,B DOWM
			136--155	R100%,G UP,B UP
			156--175	R DOWM,G DOWM,B100%
			176--195	R100%,G100%,B100%,W100%
			196--200	2800K
			201--205	3200K
			206--210	4000K

			211--215	4500K
			216--220	5000K
			221--225	5600K
			226--230	6500K
			231--235	7000K
			236--240	7500K
			241--255	8000K
CH-14		Macro color	0--9	No effect
			10--19	Macro color 1
			20--29	Macro color 2
CH-14		Macro color (10 numbers and one type)
			240--249	Macro color 24
			250--255	Macro color 25
	Positive		0--9	No effect
			10--12	Monochrome pattern 1
			13--15	Monochrome pattern 2
		 (3 numbers and one type)
			208--210	Monochrome pattern 67
			211--213	Mixed color pattern

CH-15	Positive	Static pattern		1	
			214--216	Mixed color pattern 2	
		 (3 numbers and one type)	
			250--252	Mixed color pattern 14	
			253--255	Mixed color pattern 15	
CH-16		Positive	Dynamic pattern	0--9	No effect
				10--14	Monochrome dynamic pattern 1
				15--19	Monochrome dynamic pattern 2
			 (5 numbers and one type)
				155--159	Monochrome dynamic pattern 30
CH-16	Positive		Dynamic pattern	160--164	Mixed color dynamic pattern 1
				165--169	Mixed color dynamic pattern 2
			 (5 numbers and one type)
				220--224	Mixed color dynamic pattern 13
				225--255	Mixed color

				dynamic pattern 14
CH-17	Positive	Pattern translation (with 16 channels)	0--255	Selecting a dynamic pattern scene
CH-18		Dynamic pattern speed (with 16 channels)	0--9	No effect
			10--132	Walking, fast to slow
			133--255	Go backwards, from slow to fast
CH-19		Background color R	0--255	from dark to light
CH-20		Background color G	0--255	from dark to light
CH-21		Background color B	0--255	from dark to light
CH-22	Background color W	0--255	from dark to light	
CH-23	Reverse side	Total dimming	0--255	from dark to light
CH-24		Strobe	0--3	Light up
			4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
			204--255	Random strobe
CH-25		R dimming	0--255	from dark to light
CH-26		G dimming	0--255	from dark to light
CH-27	B dimming	0--255	from dark to light	

CH-28		W dimming	0--255	from dark to light
CH-29		Pattern effect	0--255	from dark to light
CH-30		Pattern translation (with 29 channels)	0--255	Select a pattern scene
CH-31		Pattern self-propelled speed (with 29 channels)	0--255	Select a pattern scene
CH-32	Dimming mode		0--49	Mode 1
			50--99	Mode 2
CH-32	Dimming mode		100--149	Mode 3
			150--255	Mode 4
CH-33	Reset		0--250	No effect
			251--255	Reset within 5S

43CH

Channel	Display	Function	Value
CH-1	Pan	0--255	Pan control
CH-2	Pan adjustment	0--255	Adjustment control
CH-3	Tilt	0--255	Tilt control
CH-4	Tilt adjustment	0--255	Adjustment control
CH-5	Pan/Tilt speed	0--255	From fast to slow
CH-6	Pan Stepless control	No effect	0----55
		Go from slow to fast	56----155

		Reverse from slow to fast	156----255	
CH-7	Tilt Stepless control	No effect	0----55	
		Go from slow to fast	56----155	
		Reverse from slow to fast	156----255	
CH-8	Focus	0--255	focusing	
CH-9	Positive	Dimmer	0--255	from dark to light
CH-10		Dimming	0--255	fine-tuning control
CH-11		Strobe	0--3	Light up
			4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
			204--255	Random strobe
CH-12		R	0--255	Red dimming
CH-13		R adjust	0--255	Red adjustment
CH-14		G	0--255	Green dimming
CH-15		G adjust	0--255	Green adjustment
CH-16		B	0--255	Blue dimming
CH-17		B dimming	0--255	Blue adjustment
CH-18		W	0--255	White dimming
CH-19		W dimming	0--255	Green adjustment
			0--49	Mode 1

CH-20	Positive	Dimming mode	50--99	Mode 2
			100--149	Mode 3
			150--255	Mode 4
CH-21		Color temperature	0--15	No
			16--35	R100%,G UP,B0%
			36--55	R DOWM,G100%,B0%
			56--75	R0%,G100%,B UP
			76--95	R0%,G DOWM,B100%
			96--115	R UP,G0%,B100%
			116--135	R100%,G0%,B DOWM
			136--155	R100%,G UP,B UP
			156--175	R DOWM,G DOWM,B100%
	176--195		R 100%,G 100%,B100%,W10 0%	
CH-21	Color temperature	196--200	2800K	
		201--205	3200K	
		206--210	4000K	
		211--215	4500K	
		216--220	5000K	

			221--225	5600K
			226--230	6500K
			231--235	7000K
			236--240	7500K
			241--255	8000K
CH-22		Macro color	0--9	No effect
			10--19	Macro color 1
			20--29	Macro color 2
CH-22		Macro color (10 numbers and one type)
			240--249	Macro color 24
			250--255	Macro color 25
CH-23		Static pattern	0--9	No effect
			10--12	Monochrome pattern 1
			13--15	Monochrome pattern 2
		 (3 numbers and one type)
			208--210	Monochrome pattern 67
			211--213	Mixed color pattern 1
			214--216	Mixed color pattern
	Positive			

				2
		 (3 numbers and one type)
			250--252	Mixed color pattern 14
			253--255	Mixed color pattern 15
CH-24	Positive	Dynamic pattern	0--9	No effect
			10--14	Monochrome dynamic pattern 1
			15--19	Monochrome dynamic pattern 2
		 (5 numbers and one type)
CH-24		Dynamic pattern	155--159	Monochrome dynamic pattern 30
			160--164	Mixed color dynamic pattern 1
			165--169	Mixed color dynamic pattern 2
		 (5 numbers and one type)
			220--224	Mixed color dynamic pattern 13
			225--255	Mixed color dynamic pattern 14
CH-25		Pattern translation	0--255	Selecting a

		(with 24 channels)		dynamic pattern scene
CH-26	Positive	Dynamic pattern speed (with 24 channels)	0--9	No effect
			10--132	Walking, fast to slow
			133--255	Go backwards, from slow to fast
CH-27		Pattern effect fade	0--255	Pattern effect fade
CH-28		Background total dimming	0--255	Background 0-100% dimming
CH-29		Background strobe	0--255	Background strobe
CH-30		Background color R	0--255	Pattern effect red
CH-31		Background color G	0--255	Pattern effect green
CH-32		Background color B	0--255	Pattern effect blue
CH-33	Background color W	0--255	Pattern effect white	
CH-34	Reverse	Total dimming	0--255	from dark to light
CH-35		Strobe	0--3	Light up
			4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
	204--255		Random strobe	

CH-36	side	R dimming	0--255	from dark to light
CH-37		G dimming	0--255	from dark to light
CH-38		B dimming	0--255	from dark to light
CH-39		W dimming	0--255	from dark to light
CH-40		Pattern effect	0--255	from dark to light
CH-41		Pattern translation (with 40 channels)	0--255	Select a pattern scene
CH-42	Reverse side	Pattern self-propelled speed (with 40 channels)	0--255	Select a pattern scene
CH-43	Reset		0--250	No effect
			251--255	Reset within 5S

143CH

Channel	Display	Function	Value	
CH-1	Pan	0--255	Pan control	
CH-2	Pan adjustment	0--255	Adjustment control	
CH-3	Tilt	0--255	Tilt control	
CH-4	Tilt adjustment	0--255	Adjustment control	
CH-5	Pan/Tilt speed	0--255	From fast to slow	
CH-6	Pan Stepless control		No effect	0----55
			Go from slow to fast	56----155

		Reverse from slow to fast	156----255	
CH-7	Tilt Stepless control	No effect	0----55	
		Go from slow to fast	56----155	
		Reverse from slow to fast	156----255	
CH-8	Focus	0--255	focusing	
CH-9	Positive	Dimmer	0--255	from dark to light
CH-10		Dimming	0--255	fine-tuning control
CH-11		Strobe	0--3	Light up
			4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
			204--255	Random strobe
CH-12		R	0--255	Red dimming
CH-13		R adjust	0--255	Red adjustment
CH-14		G	0--255	Green dimming
CH-15		G adjust	0--255	Green adjustment
CH-16		B	0--255	Blue dimming
CH-17		B dimming	0--255	Blue adjustment
CH-18		W	0--255	White dimming
CH-19		W dimming	0--255	Green adjustment
			0--49	Mode 1

CH-20	Positive	Dimming mode	50--99	Mode 2			
			100--149	Mode 3			
			150--255	Mode 4			
CH-21		Color temperature	Color temperature	0--15	No		
				16--35	R100%,G UP,B0%		
				36--55	R DOWM,G100%,B0%		
				56--75	R0%,G100%,B UP		
				76--95	R0%,G DOWM,B100%		
				96--115	R UP,G0%,B100%		
				116--135	R100%,G0%,B DOWM		
				136--155	R100%,G UP,B UP		
				CH-21	Color temperature	Color temperature	156--175
	176--195						R 100%,G 100%,B100%,W100%
	196--200						2800K
	201--205						3200K
	206--210	4000K					
				211--215	4500K		
				216--220	5000K		

			221--225	5600K
			226--230	6500K
			231--235	7000K
			236--240	7500K
			241--255	8000K
CH-22	Positive	Macro color	0--9	No effect
			10--19	Macro color 1
			20--29	Macro color 2
		 (10 numbers and one type)
			240--249	Macro color 24
			250--255	Macro color 25
CH-23	Positive	Static pattern	0--9	No effect
			10--12	Monochrome pattern 1
			13--15	Monochrome pattern 2
		 (3 numbers and one type)
			208--210	Monochrome pattern 67
			211--213	Mixed color pattern 1
			214--216	Mixed color pattern

CH-23	Positive	Static pattern		2
		 (3 numbers and one type)
			250--252	Mixed color pattern 14
			253--255	Mixed color pattern 15
			0--9	No effect
			10--14	Monochrome dynamic pattern 1
CH-24		Dynamic pattern	15--19	Monochrome dynamic pattern 2
		 (5 numbers and one type)
			155--159	Monochrome dynamic pattern 30
			160--164	Mixed color dynamic pattern 1
			165--169	Mixed color dynamic pattern 2
		 (5 numbers and one type)
	220--224		Mixed color dynamic pattern 13	
	225--255		Mixed color dynamic pattern 14	
CH-25	Pattern translation	0--255	Selecting a dynamic pattern	

		(with 24 channels)		scene
CH-26	Positive	Dynamic pattern speed (with 24 channels)	0--9	No effect
CH-26			10--132	Walking, fast to slow
			133--255	Go backwards, from slow to fast
CH-27		Pattern effect fade	0--255	Pattern effect fade
CH-28		Background total dimming	0--255	Background 0-100% dimming
CH-29		Background strobe	0--255	Background strobe
CH-30		Background color R	0--255	Pattern effect red
CH-31		Background color G	0--255	Pattern effect green
CH-32		Background color B	0--255	Pattern effect blue
CH-33		Background color W	0--255	Pattern effect white
CH-34		Total dimming	0--255	from dark to light
CH-35	Reverse side	Strobe	0--3	Light up
			4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
			204--255	Random strobe

CH-36	Reverse side	R dimming	0--255	from dark to light
CH-37		G dimming	0--255	from dark to light
CH-38		B dimming	0--255	from dark to light
CH-39		W dimming	0--255	from dark to light
CH-40		Pattern effect	0--255	from dark to light
CH-41		Pattern translation (with 40 channels)	0--255	Select a pattern scene
CH-42	Pattern self-propelled speed (with 40 channels)	0--255	Select a pattern scene	
CH-43	Reset		0--250	No effect
			251--255	Reset within 5S
CH-44	Positive	R1 LED dimming	0--255	R1 LED dimming
CH-45		G1 LED dimming	0--255	G1 LED dimming
CH-46		B1 LED dimming	0--255	B1 LED dimming
CH-47		W1 LED dimming	0--255	W1 LED dimming
.....	
CH-140		R25 LED dimming	0--255	R19 LED dimming

CH-141	Positive	G25 LED dimming	0--255	G19 LED dimming
CH-142		B25 LED dimming	0--255	B19 LED dimming
CH-143		W25 LED dimming	0--255	W19 LED dimming

5. Trouble shooting

Following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

A. The unit does not work, no light and the fan does not work

1. Check the connection of power and main fuse.
2. Measure the mains voltage on the main connector.
3. Check the power on LED.

B. Not responding to DMX controller

1. DMX LED should be on. If not, check DMX connectors, cables to see if link properly.
2. If the DMX LED is on and no response to the channel, check the address settings and DMX polarity.
3. If you have intermittent DMX signal problems, check the pins on connectors or on PCB of the unit or the previous one.
4. Try to use another DMX controller.
5. Check if the DMX cables run near or run alongside to high voltage cables that may cause damage or interference to DMX interface circuit.

C. One of the channels is not working well

1. The stepper motor might be damaged or the cable connected to the PCB is broken.
2. The motor's drive IC on the PCB might be out of condition.

6. Fixture Cleaning

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics.

- Clean with soft cloth using normal glass cleaning fluid.
- Always dry the parts carefully.
- Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days.

Model: SQUARE

PLUSlite

Voltage:	100V ~ 240V/50~60Hz
LEDs:	Wash 25x40W LED 4in1 RGBW; Strobe 576*0.5W 4in RGBW LED.
IP Rating:	IP20
Working Position:	Any safe working position
Power Draw:	1000W; Power factor PF≥0.98
Control Mode:	RDM, Artnet Control, DMX512
Weight:	24Kgs.
Dimensions:	37.6cm × 27cm × 600cm
Colors:	Color Mixing
Warranty:	2 Year

Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.

PLUSlite

PIU39
AUDIO - VISUAL

<https://www.piu39av.com/pluslite-lighting/>